



Quickguide VT82

Installing the VT82 and connecting it to the network.

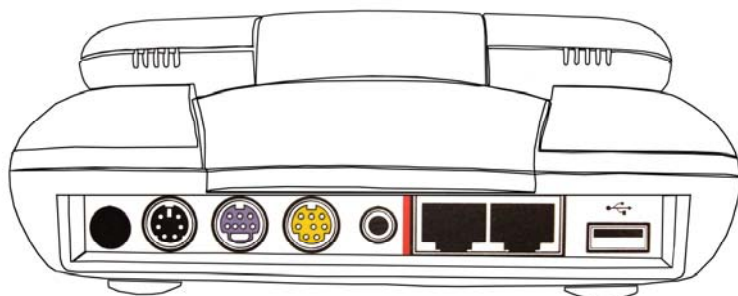

Connect an Ethernet cable between the Network port (red port) on the phone and your broadband router or ADSL modem



Connect one end of the power adapter to the adapter port  and the other end to the wall power supply.

Press the power button  to switch on the VT82.

Note: Your SIP account and system settings have to be configured by your supplier before calls can be made.

When VT82 is powered on, a bootup screen will be displayed. The icons in the upper right corner are very important.




SIP registration OK. You can make a call.



SIP registration fail. You have to check the SIP account and system settings.



LAN connected

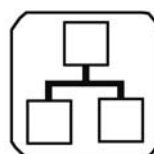

LAN disconnected. Check the ethernet cable connection to the network port and your broadband router or ADSL modem.






PLACING A CALL FROM VT82

- Press 


The LCD screen displays : please input phone number


- Dial the SIP account/address

Press the  key to change between small/ capital letters, numbers or signs.

f. ex the  key = 1, @, _ , - , space. The  key = 2, A,B, C, a, b, c.

Press several times to get the right sign like when you are sending an sms.

If you want to erase press the  key.

- Press OK 


When the call is in video mode pressing the  key will display user`s local

Image (PIP) on the screen, by pressing “miroir” several times your image will move around corner to corner untill it disappears the fourth time.

ANSWERING A CALL











- Press 


END A CALL


- Press 





ADD TO PHONEBOOK

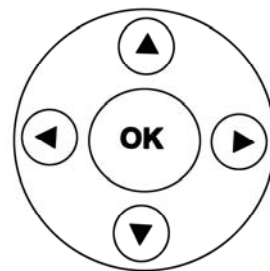

- Press the “phonebook”  key
- Choose “speed dial” with arrow button down 
- Press 
- Press the speed dial number you want 0.....9
- Press 
- The LCD screen displays “edit” press 
- Name, write the persons name (Choose small/capital letters with the  key).
- Press the arrow button down 
- Phone, write in the SIP account/address
- Press 
- The LCD screen displays “ Add this record ?” press  if you wan to save.
If you want to erase press the  key.








Press the  to choose between small/capital letters, numbers and signs.


F. ex the  key = 1, @, -, space, the  key = 2, A, B, C, a, b, c.

PLACING A CALL FROM THE PHONEBOOK









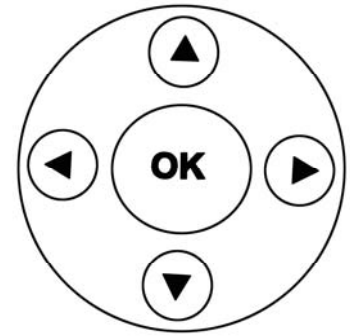




 
- Press 
- Press 
- Then press the speed dial number of the person you want to call. 3.

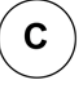CURSOR PANEL

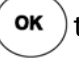-  OSD menus = move the cursor left or to go back to the previous menu.
During a video call = reduce the incoming video bit rate.
-  OSD menus = move the cursor up.
During a call = Turn the volume up.
-  OSD menus = move the cursor right or to enter the sub menu.
During a video call = rase the incoming video bit rate.
-  OSD menus = move the cursor down.
During a call = turn the volume down.
-  OSD menus = to pop up the OSD menu, to enter the sub menu, or to confirm the selection.



HOT KEYS

-  Take line / Hands-free key / launch a call after dialing the number.
-  Hang up Key / refuse an incoming call / go back to stand-by screen directly.
-  Annuler key / backspace key in editing mode / return to the previous screen without having to start from the beginning of the menu.
-  Menu key, press  and then press  to enter the menu.
-  Phonebook key
-  Outbox list in offline mode, calls can be launched from the list by pressing  key.
-  Sound privacy key, mute the sound
-  Displays user`s local image (PIP).
-  Online mode / transfer calls to the third party.
Offline mode / press  and then  for redial.



Still key, freeze the your image




Privacy key, stop sending your image to the other side.



Source key, press to change between build in camera and external video source f. ex external camera, DVD player, surveillance-camera, videocamera.

REAR VIEW

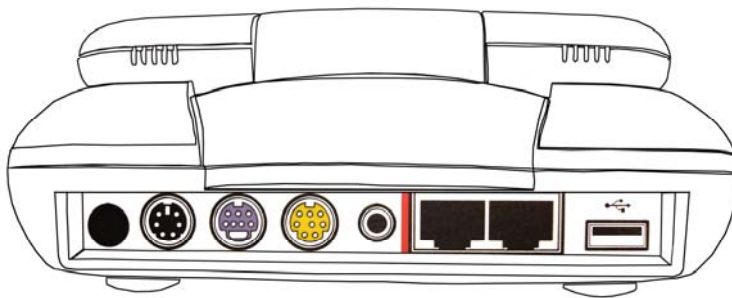

Audio / Video output / input connector. Use the external devices f. ex TV, flat screen (sortie, green) surveillance camera, video-camera, (entrée, brown).




to connect external camera



USB port to connect specially made keyboard to send text messages between two VT82. The USB port on the side of the VT82 has the same function.

SIDE VIEW

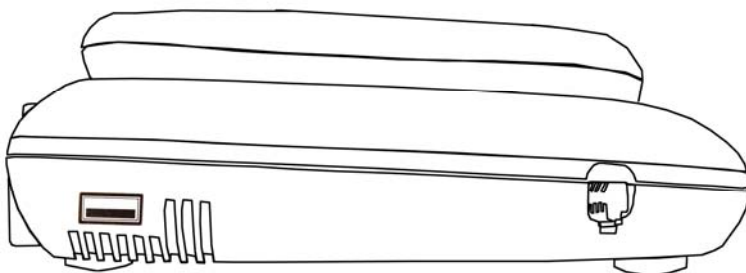

Handset jack.

IMPORTANT !

If your videophone gives you the error message

“SIP registration failed please check your network”

or the LCD screen displays black screens  .

- A. Reboot your unit by pressing the power button on the back of the unit two times.

If that does not help then :

- B. Reboot your router or ADSL modem.

If you still have a problem contact your supplier.